

I : Inspection *I : Audible check L : Lubrication R : Replace or change

Items	Months	Service Intervals (Odometer reading or months, whichever occurs first)															
		12	24	36	48	60	72	84	96	108	120	132	144	156	168		
		Odometer Reading	× 1000 km														
OPERATIONS INSIDE THE VEHICLE																	
Check brake pedal and clutch pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace air purifier filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		Severe usage	R : More frequently														
Check operation of all functions and lights		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
OPERATIONS OUTSIDE THE VEHICLE																	
Check wheel alignment			I		I		I		I		I		I		I		
Check tyre pressures		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check front and rear wheel bearings for play					I				I				I			I	
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check brake pads and discs for wear		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
		Severe usage	I : Every 7,500km or every 6 months														
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I		
OPERATIONS AFTER ENGINE IS WARMED UP																	
Check CVT or Automatic transmission oil level		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace automatic transmission or CVT fluid		Normal usage						R							R		
		Severe usage			R			R			R				R		
Change engine oil (Refer owners manual for specification)		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Replace engine oil filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		Severe usage	R : Every 7,500km														
Check exhaust gas recirculation (EGR) system (petrol-powered vehicles)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
OTHERS																	
Check body condition for damage		I : Every year															
Check the common rail engine (small injection quantity learning)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Reset maintenance service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

NOTE:

*1 : If excessive valve noise is evident, check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or rental car.
- (8) More than 50% of operation time in heavy city traffic, or temperatures at, or above 32°C
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.